

RING POOL SETUP INSTRUCTION SHEET

SITE PREPARATION

WARNING - VERY IMPORTANT!

- SITE MUST BE LEVEL. **FAILURE TO DO SO MAY CAUSE POOL COLLAPSE.**
- The pool must be assembled on a smooth and level site of firm soil that is free of stones, gravel, sticks, black-top or other oil base compounds. Do not install pool on a wooden deck or any type of wooden surface.
- **FAILURE TO FOLLOW THE INSTRUCTIONS BELOW WILL CAUSE POOL TO COLLAPSE AND WILL VOID THE WARRANTY!**

1. Select a level area, and completely remove all debris, twigs, stones, etc. DO NOT select an area under overhead electrical lines, trees or within 15 feet of a house, building, etc. The area should also be at least 10 feet away, and no more than 21 feet away, from a 110 volt AC outlet, protected by a Ground Fault Circuit Interrupter.
2. Contact your local utilities, checking that no underground cables, telephone lines, gas lines, etc. run beneath the area you have selected.

POOL INSTALLATION

WARNING: DO NOT overfill the pool and / or allow people to lay over or push down on the inflated ring – **POOL WALL WILL COLLAPSE!** DRAIN pool to the proper level after a heavy rain.

TIP: It will be much easier to install your pool if you unfold it and let it lay in direct sunlight for about 2 hours prior to installation. This will help to insure a wrinkle-free fit because the pool material will be more pliable allowing it to stretch into shape during installation.

1. Carefully unfold the Quick Set® pool and inspect seams for manufacturing defects. With the inflatable ring on the top side, lay out the pool in the area selected, making sure the bottom of the pool is both flat and round. Position the intake / outlet fitting holes so they are 10 to 21 feet from the electrical outlet you plan to use for the pool pump.
2. Inflate the top ring. The air valve for the top ring can be found by the warning sign. Squeeze the base of the valve stem to open an internal check valve while inflating.
3. Start filling the pool with water. After about 1-inch of water is on the bottom, stop filling and smooth wrinkles out of the bottom of the pool. Pull the outer wall out from under the top ring, all around the bottom of the pool, so that it fills evenly.

NOTE: IF MORE THAN 1-2 INCHES OF WATER COLLECTS ON ANY ONE SIDE BEFORE THE POOL STARTS FILLING IN THE CENTER, THE POOL IS NOT LEVEL ENOUGH, AND MUST BE CORRECTED, SEE “SITE PREPARATION”, ABOVE.

4. **NOTE: THE WEIGHT OF THE WATER WILL PREVENT ADJUSTMENT AFTER THIS POINT.**
5. Following the instructions under “Power Filter Installation” in the “Swimming Pool Filter System” owner’s manual, install both sets of Pool Wall Fittings as described in Steps “A” - “C”
6. Make sure the drain fitting is plugged securely and the cap is in place. Plug both Pool Wall Fittings (16) from the inside of the pool using two Wall Fitting Plugs (20).
7. Now, as you continue filling, the inflated ring will rise as the water deepens. Water level should be near the bottom of the ring. Once this is done, refer back to the “Swimming Pool Filter System” owner’s manual, and continue from Step “D” on through the rest of the installation.

POWER FILTER

AND

WALL FITTING INSTALLATION

IN THE SWIMMING
POOL FILTER SYSTEM
OWNER’S MANUAL, ON PAGE 6,
POWER FILTER INSTALLATION,
INSTALL POWER FILTER AND
BOTH SETS OF THE POOL WALL
FITTINGS AS DESCRIBED IN
STEPS A - C.